

GENERAL NOTES: RF CONNECTORS CD 0015

Recommended Coupling Nut Torque:

Series	Material	Recommended Torque		
SMA	BRASS	0.34 - 0.57 Nm		
SMA	STAINLESS STEEL	0.8 - 1.13 Nm		
SMC	BRASS	0.21 - 0.35 Nm		
TNC	BRASS	0.46 - 0.69 Nm		
TNC	STAINLESS STEEL	1.4 - 1.7 Nm		
N Type	BRASS	0.7 - 1.1 Nm		
N Type	STAINLESS STEEL	1.4 - 1.7 Nm		
7/16	BRASS	25 - 30 Nm		

Recommended Mounting Nut Torque:

Series	eries HEX A/F		Material		Recommended Torque		
SMA	8mm/11mm	STAINLESS STEEL		1.35 - 1.7 Nm			
SMA	8mm	BRASS		0.9 - 1.1 Nm			
SMB	6mm	BRASS		0.34 - 0.57 Nm			
SMC	6mm	BRASS			0.34 - 0.57 Nm		
TNC	16mm	STAINLESS STEEL & BRASS		4.0 - 4.5 Nm			
TNC 14mm		STAINLESS STEEL & BRASS		2.5 - 2.8 Nm			
N TYPE	19mm / 21mm	STAINLESS STEEL		4.5 - 5.0 Nm			
N TYPE	19mm / 21mm	BRASS		4.0 - 4.5 Nm			
BNC	16mm	STAINLESS STEEL & BRASS		4.0 - 4.5 Nm			
BNC	14mm	STAINLESS STEEL & BRASS		2.5 - 2.8 Nm			
A4	SHEET 1 OF 1		DIN	ENSIONS ARE IN MILLIMETRES			
			NAME		SIGNATURE	DATE	
ISSUE :		DRAWN	GE			02/06/15	
		СНК'D	PS			02/06/15	
6-8 COLNE ROAD, TWICKENHAM, MIDDLESEX. TW1 4JR		SUBJECT TO GOAL TO IN	APPY'D THE INFORMATION IS GIVEN AS AN INDICATION ONLY AND IS SUBJECT TO CHANGE WITHOUT NOTICE. IN THE CONTINUAL GOAL TO IMPROVE OUR PRODUCTS, WE RESERVE THE RIGHT TO MAKE ANY MODIFICATIONS NECESSARY WITHOUT PRIOR NOTICE.				

Recommendations:

- Normal Storage temperature range: -40°C to +75°C. Humidity: 85% or less.
- Always install protective end caps when connectors are not in use.
- Never store a connector loose in a box. This is one of the most common causes of connector damage.
- Never place a connector contact-end down on to any hard surface. The mating face, contact or their plating can become damaged.
- Do not touch the mating face or contact surfaces of the connector. Natural oils present in skin along with microscopic particles and other contaminants can degrade performance and be difficult to remove.
- To protect devices from electrostatic discharge (ESD), always wear a suitably grounded wrist strap and work on a grounded, conductive table mat.
- We recommend that solder products that have had a storage period should to be tested for solderability before use.
- Always assemble connector using the procedures, stripping dimensions and correct tooling specified in the connectors datasheet.
- When mating and un-mating, connector mating surfaces should not be rotated. The connectors axes should be aligned, to ensure the male centre pin slips concentrically into the centre female contact. (If this is not done serious damage may result). Enure as they are mated, the connectors engage smoothly. Keeping the connectors steady, initialy tighten the coupling nut by hand and complete with a suitable torque wrench. Always preventing connector rotation.

PARTY IS PROHIBITED WITHOUT PRIOR WRITTEN CONSENI

THIS DOCUMENT IS THE PROPERTY OF COAX CONNECTORS LTD. REPRODUCTION OR COMMUNICATION IN ANY FORM TO A THIRD